


- V+ Positive voltage output for all lights and Soundline.
- 8 Number 8 button output, 5v logic level.
- 9 Number 9 button output, 5v logic level.
- Gnd Receiver ground
- HL Headlight output, switched to Gnd in forward direction
- DLR Ditchlight right output, switched to Gnd in forward direction
- DLL Ditchlight left output, switched to Gnd in forward direction
- RL Rear light output, switched to Gnd in reverse.
- #7 Number 7 button output, open collector.
- SL Connection to Soundline.
- T1 **Track or battery input 12-18v d.c., 22V MAX**
- BAT **Battery input only, notice correct polarity 12-18v d.c., 18V MAX**
- M Connections to the motor

- Note:
1. To disable back emf, constant speed, short disable emf pin to ground.
 2. Pushing the 9 button causes the ditch lights to flash alternately for roughly 15 sec.
 3. Due to dissimilar motor behaviour, it is recommended to disable emf in MU.

Warning: make sure the motor is completely isolated from all track wiring.

KLR 106 RECEIVER

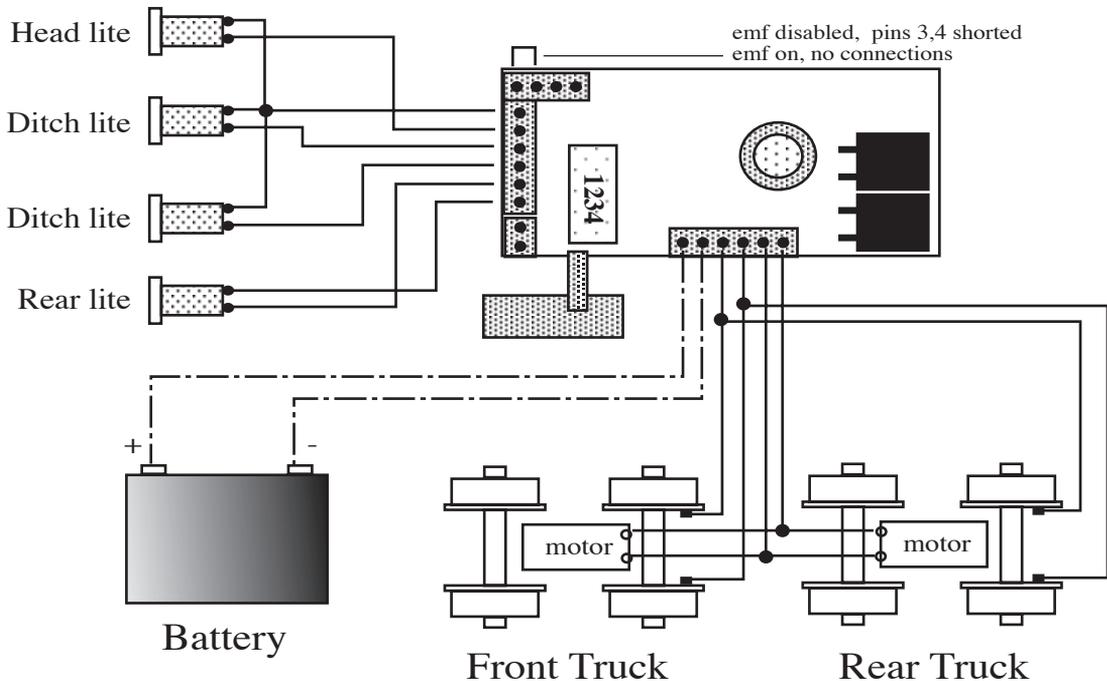

Warning: make sure the motor is isolated from all track wiring.